


FROSCH

Mudflaps rear
AUDI Q7, 2015->

www.frosch.pro

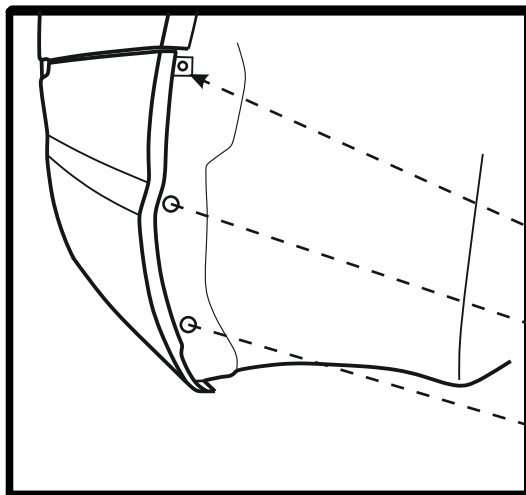


Preparation

2x  - original screw

1x  - metal bracket



! The bracket is installed on the standard fender guard

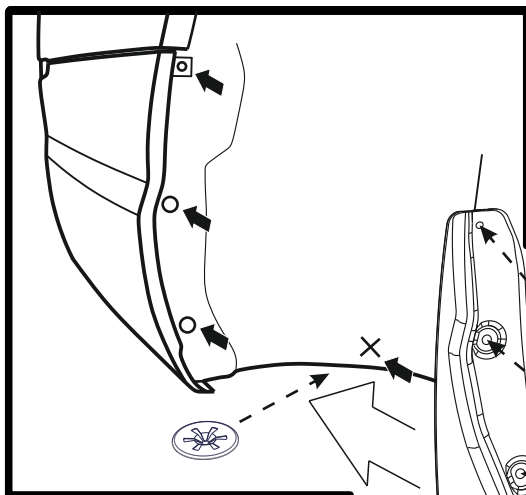

Installation

2x  - original screw

1x  - screw Ø4,2 x 16 mm

1x  - screw Ø6 x 15 mm

1x  - spring washer



Art.: EXP.NLF.40.01.E13

Set package

Mudflap - 2 pcs.

Screw Ø4,2 x 16 mm - 2 pcs. (TL-028)

Screw Ø6 x 15 mm - 2 pcs. (TL-021)

Spring washer - 2 pcs. (TL-048)

Metal bracket - 2 pcs. (TL-026)