

Universal Wiringkit 13-pole. System Jaeger



ASSEMBLY

Clear the wiring to the left-hand and the right-hand rear lights in the luggage compartment. Find the wires having various functions with a test light and connect these to the wiring according to the diagram.

NB

The wires should not be cut and the insulation must not be removed. Place the wire in the continuous slot of the rapid-connector and the wire of the wiring set in the enclosed slot. Use pliers to cut the metal plate and close the lid.

		D	F	GB	NL	
←	1	Gelb	Jaune	Yellow	Geel	
↔	2	Blau	Blue	Blue	Blauw	
⏚ 1-8	3	Weiss	Blanc	White	Wit	
→	4	Grün	Vert	Green	Groen	
☀ R	5	Braun	Marron	Brown	Bruin	
STOP	6	Rot	Rouge	Red	Rood	
☀ L	7	Schwarz	Noir	Black	Zwart	
↔ Reverse	8	Orange	Orange	Orange	Oranje	
30 + ⚡	9	Grün	Vert	Green	Groen	2,5 mm ²
15 + ⚡	10	Rot	Rouge	Red	Rood	2,5 mm ²
⏚ 10	11	Weiss	Blanc	White	Wit	
	12	X	X	X	X	
⏚ 9-12	13	Weiss	Blanc	White	Wit	
↔	2a	Grau	Gris	Grey	Grijs	

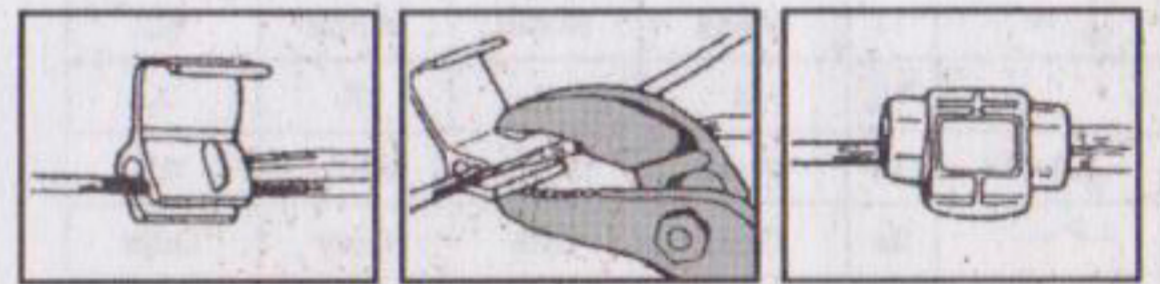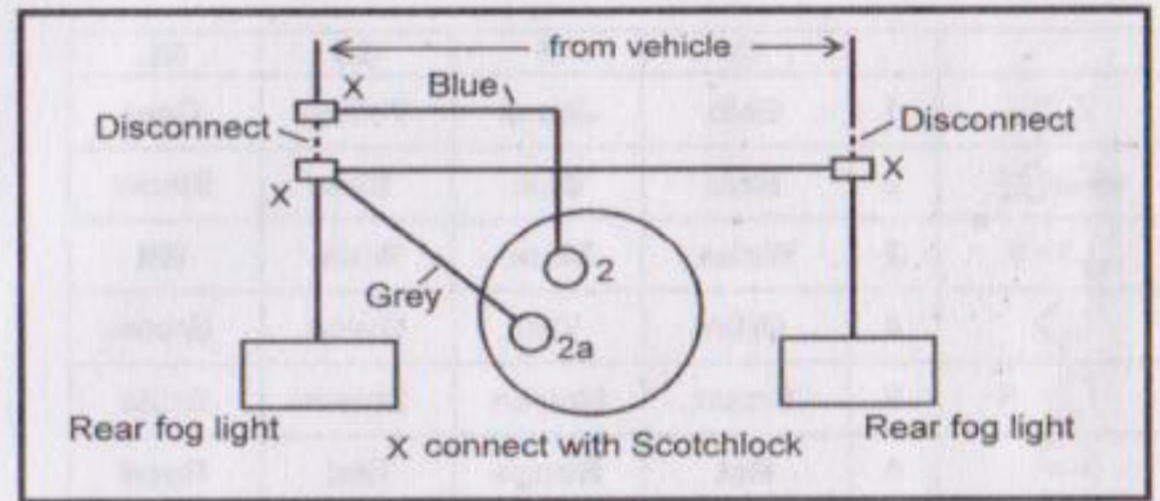

If one wishes to use a connection in the connector box for a permanent power supply for the interior lighting of the caravan, the wire of minimum 2,5 mm² should be taken directly from the battery to clamp 9 of the connector box. Here however the floating fuse should be fitted.

